



VOICESOLO XT
PERSONAL VOCAL MONITORS

**VSM-200P XT
USER MANUAL**



IMPORTANT SAFETY INSTRUCTIONS



The lightning flash with an arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Do not use this apparatus near water.

Clean only with dry cloth.

Do not block any ventilation openings.

Install in accordance with the manufacturer’s instructions.

Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Only use attachments/accessories specified by the manufacturer.



Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning!

- To reduce the risk of fire or electrical shock, do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.

Service

- There are no user-serviceable parts inside.
- All service must be performed by qualified personnel.

Table of Contents

<i>Introduction</i>	4
<i>Front panel diagram</i>	6
<i>Back panel diagram</i>	7
<i>Mic stand mounting procedure</i>	8
<i>Using VoiceSoloP XT</i>	11
<i>Specifications</i>	12

Specifications, interface, and features are subject to change without notice due to continued product improvement

Introduction

Welcome to VoiceSoloP XT

The TC-Helicon VSM range of near field live monitoring speakers is a new concept in personal monitoring. TC-Helicon strives for excellence in all things related to vocals, and the VSM range builds upon the success and worldwide reputation of TC-Helicon's vocal expertise.

If you can't hear yourself correctly in a live situation, it's hard to produce a good performance. VSM monitors are designed to integrate into a boom-style microphone stand bringing the speaker close to the performer. This yields a wide range of benefits over existing wedge-type or in-ear options such as:

- Lower monitor bleed into the main PA sound
- High volume level before feedback
- Better interaction with audience; stage space is reclaimed from floor wedges and ear plug barriers are not required as in in-ear monitors.

The VSM monitors use a two-way point source ICT™ driver that eliminates the problem of hearing separated high and low frequencies which happens when listening to conventional speaker systems. This is especially important when used on a microphone stand as the speaker is located very close to the listener and the separation would be more evident.

VSM-200P XT Features:

- Improved high frequency response in the critical 4 to 10 kHz range resulting in higher accuracy and smoother sound.
- Quick mic stand set up. Integrates with boom so the same stand is used for the monitor and microphone.
- Versatile placement options provided by dual stand mounting holes and dual bevelled edges for floor mounting.
- Two-way point source 6.5" ICT™ driver for optimal near-field live monitoring.
- High power capacity: 240W peak
- Cast aluminum enclosure for maximum rigidity and minimum cabinet resonance
- Front panel mounted volume control for easy access.

About TC-Helicon



TC-Helicon's core value is that the voice is the world's most beautiful instrument. Therefore, everything TC-Helicon does is dedicated to this instrument. TC-Helicon envisions a world where those who work with voice are able to bring out its very best and where the possibilities of vocal craft are endless.

The company's mission was galvanized by a simple question, "Isn't it time that someone finally provided dedicated tools and solutions for voice?"

TC-Helicon is revolutionizing the vocal channel by providing innovative tools and solutions for people who create and work with the speaking and singing voice. Our customers include the most demanding of live performers, producers, broadcasters and recording engineers.

Enjoy!

The TC-Helicon Team

a TC Group company

Introduction

Preliminary Recommendations

The VoiceSoloP XT VSM series of monitors are capable of very high sound pressure levels (SPLs) especially at the close range when integrated onto a microphone stand. They were designed this way to be able to be loud enough to compete with live acoustic drum kits. In situations where high monitoring volumes are required we recommend that ear protection be used.

For continuous exposure we recommend the occasional use of a sound level meter capable of measuring the sound level over a period of exposure according to noise control standards. This should be used to check that noise levels are always within safety limits.

Unpacking

Open the box from the top and remove cabling. Lift out styrofoam insert, then using both hands lift out VoiceSoloP XT. Remove plastic bag from VoiceSoloP XT. Nothing in your speakers should rattle. Inspect each speaker for signs of transit damage. In the unlikely event of this having occurred inform the carrier and the supplier. Keep all the packaging if damage has occurred, as this will show evidence of excessive handling forces. It is also a good idea to keep the packaging if possible for future transportation.

Registering VoiceSoloP XT

There are two methods for registering your VoiceSoloP XT:

- Online: visit www.tc-helicon.com/VoiceSolo and click Product Registration in the left hand column.
- Mail: complete and return the registration card included with your product

Support

If you run into technical challenges, TC-Helicon will be more than happy to help. There are a number of sources for product support. We've prioritized them below according to the speed at which you will access the help information.

1. Manual: The manual for VoiceSoloP XT VSM-200P is a good source of application information and answers for common questions.
3. On-Line: visit www.tcsupport.tc to search and ask for answers on up to date questions about VoiceSoloP XT.
4. Phone:
International: +45 8742 7000
USA & Canada: 818-665-4900

Front Panel Diagram



1. VOLUME level control

This detented attenuator allows you to adjust your monitor level while staying close to your mic. This control functions differently than the volume control on an amplifier. As you turn up the volume on an amplifier, the amp works successively harder to produce more volume. With the VSM-200P XT volume control however, the amp continues to work hard whether your VoiceSoloP XT's volume control is turned up full or down. With a powerful amp and medium volume level expectations, this control can be used throughout its range. With less powerful amplifiers and high volume expectation, the most efficient path is to leave the VSM-200P XT volume control up full and for you to control volume with your mixer and/or amplifier.

2. Tuned bass port

This allows VoiceSoloP XT to produce low frequencies. It is also useful as a handle when carrying the unit.

Back Panel Diagram



1. Speakon® combo input jacks

These jacks allow either a 1/4" speaker cable or Speakon equipped speaker cable to connect to VoiceSoloP XT. These jacks are paralleled and can be used to chain several VSM-200P XT units together. Thus, both jacks are designated as IN/THRU.

A note about chaining multiple VoiceSoloP XTs

Your VSM-200P XT has an impedance, or ohms rating, of 8 Ohms. Chaining two VSM-200P XTs together lowers the impedance the amp will have to drive to 4 Ohms. Most amps will work fine at 4 Ohms even when pushed to produce loud volume levels.

Chaining three VSM-200P XTs will lower the impedance to 2.6 Ohms and adding a fourth VSM-200P XT will bring the impedance to 2 Ohms. Consult your amplifier's manual to confirm that it is capable of driving a 2 Ohm load.

Note that all Ohm ratings are specified with the volume control set to maximum.

2. Power handling legend

This legend describes the amount of power your VSM-200P XT will accept with various types of program material.

60W / AVERAGE: Also known as RMS, this means that VoiceSoloP XT will accept audio of constant level e.g. a sine wave test signal of 60 watts for an extended period of time.

120W / PROGRAM: This rating describes how many watts VoiceSoloP XT can accept over an extended period of time with dynamic program material such as what a band or singer would produce.

240W / PEAK: This is the maximum VoiceSoloP XT can withstand for a very brief period of time.

 
Mic Stand Mounting

VoiceSoloP XT Placement Options

VoiceSoloP XT can be placed in 4 different ways. This versatility allows you to use it as a mic stand mounted monitor one night, a PA system on another and then use it at home for practice or jamming.



1. Separate the boom from the stand by unscrewing the boom from the vertical shaft of the microphone stand. To do this, tighten the clutch you use to raise and lower the stand first. This makes it easier to unscrew the boom section. Hold the base of the stand with one hand and turn the boom counterclockwise (looking down from the top) with the other hand.

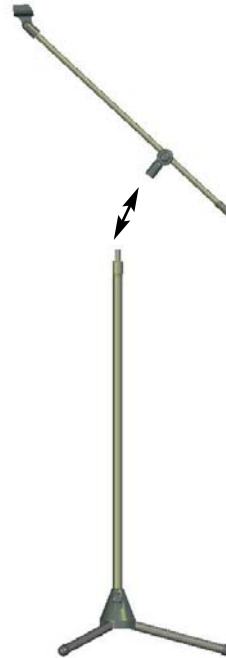


Mic Stand Mounting

Mic Stand Integration

What you need:

- VoiceSoloP XT
- Tripod microphone stand with boom - must be the style where the boom may be unscrewed from the vertical shaft of the microphone stand.
- VoiceSoloP XT adaptor hardware including:

 Mic Boom Mount Attachment

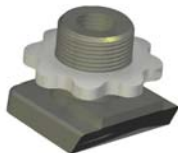


Mic Stand Mounting insert



2. Screw the Mic Stand Mounting Insert on to the vertical shaft of the microphone stand. (If your stand has 3/8", European thread it will be necessary to use a 5/8" to 3/8" thread adapter, commonly included with both microphone stands and microphone clips)

Mounting Insert

 Mic Stand Shaft

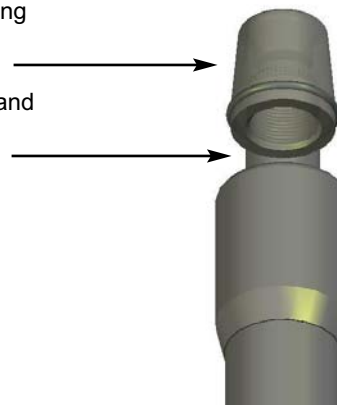


- * Tip: If you find that your VoiceSoloP XT wobbles on the stand, try wrapping the Mic Stand Shaft threads with Teflon thread tape before screwing on the Mic Stand Mounting Insert. Teflon thread tape can be found at stores that sell plumbing supplies.

Mic Stand Mounting


3. Place VoiceSoloP XT on the mic stand so the stand goes into the hole on the bottom of the VoiceSoloP XT. If you don't need to mount VoiceSoloP XT on a boom stand, you are finished with your setup. If you require the boom, continue to the next step.



 
4. The Mic Boom Mount is found in the bag of parts that came with your VoiceSoloP XT. There are two versions: a thin one for European stands and a wider one for the rest. This adapter connects the boom of your mic stand with VoiceSoloP XT. It is designed to fit into the top receptacle in VoiceSoloP XT.

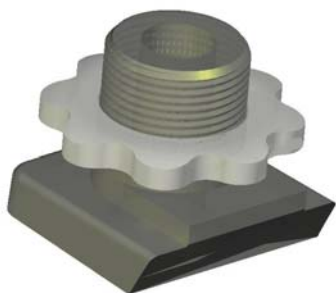

 5. Screw the Mic Boom Mount Attachment into your boom.

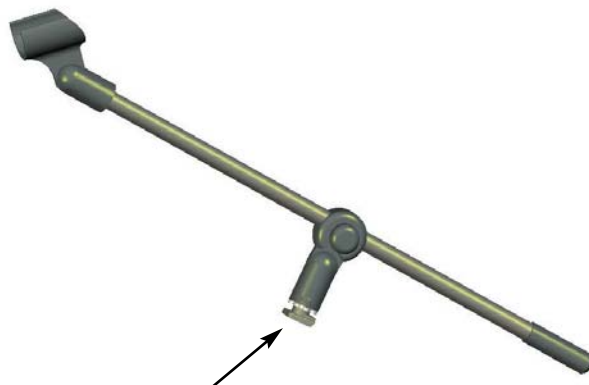

 6. Lift the lid on VoiceSoloP XT, and while holding it open, slide the Mic Boom Mount attachment, on the boom into slot on top of the monitor and let the lid close.

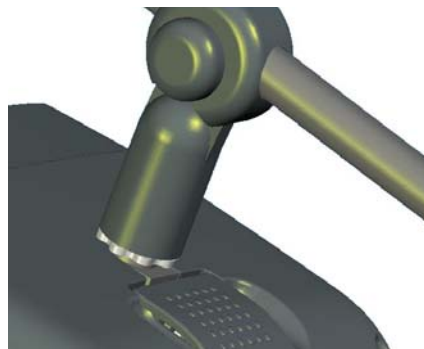

Mic Stand Mounting

7. Your VoiceSoloP XT should now look like this.



 
Adjusting the Boom

To optimize line-of-sight and audibility it is usually better to have the monitor situated somewhat beside the singer. To do this it is necessary to adjust the position of the boom. The steps required to adjust the position of the boom are as follows:

1. With the VoiceSoloP XT integrated into the mic stand and boom, loosen the boom by rotating to the right while holding onto a corner of VoiceSoloP XT.



2. Still holding the boom so that it does not swing away, turn the lock nut counter-clockwise until it's snug against the bottom of the boom. Note that it's not possible to completely tighten the lock nut with your fingers, the final action is done by swinging the boom snug against the lock nut.

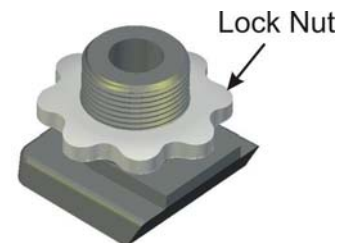

3. After tightening the lock nut with your fingers, swing the boom left, tightening to the desired position. It may be necessary to go through steps 1 - 3 a few times to get the boom tightly where you want it. The boom must be tight or the weight of the mic can cause it to swing out of position.

Read the next section to learn how to connect your new VoiceSoloP XT.

Using VoiceSoloP XT

Introduction

The following paragraphs should be read at least once to learn more about safe and successful use of VoiceSoloP XT.

Making Connections

Before connecting speaker cables

First of all, turn the amplifier that will drive VoiceSoloP XT off. This is a general rule when connecting any speaker to an amp.

Plug in the speaker cable(s)

Connect a proper speaker cable between your amplifier and VoiceSoloP XT's IN/THRU jacks. Note that speaker cables and input cables with 1/4" jacks look alike. Do not use input cables like the ones you would use to connect an instrument to an amp. Only use quality speaker cables available from your dealer.

If you plan to chain multiple VSM-200P XTs onto a single amplifier channel, you may connect cables from either jack to the next speaker. Read the Back Panel Diagram note on page 8 regarding chaining VoiceSoloP XTs.

Turn down the amp

If the amp has a volume control, it's good practice to turn it to minimum before applying power. Also ensure that the device driving the amplifier has its volume turned off.

Apply power to your amp

After powering up, turn up the input control on the amp if it features this.

Raising the level

Adjust your mixer so that your mic or instrument is fed to a monitor send. Raise the send level slowly while you sing or say "check" into the mic until the level is sufficient.

You're now ready to perform with VoiceSoloP XT!

Overcoming feedback

As in any open speaker and mic combination, there is the threat of feedback. For those who aren't familiar with the term, "feedback" describes the sudden shriek or howl that happens when a mic hears the speaker's sound and amplifies it. The following tips should help you to minimize the risk.

- Always raise the volume level *slowly*, singing something into the mic as you do so. Feedback will give you a little warning if you listen carefully. When you hear a slight ringing while you check the mic, lower the level a little and this will become your "safe" monitoring level.
- Consider your placement. When VoiceSoloP XT is slightly off to one side as opposed to directly in front of you, you will hear it better and can hear well with less level. Side placement is also optimal when using mics

with a hyper-cardioid pickup pattern because, in exchange for reduced sensitivity at the back-sides of the mic, there is more sensitivity directly at the back of the mic.

- When using handheld mics near VoiceSoloP XT never point the mic at the speaker. This seems obvious yet it happens all the time.
- When VoiceSoloP XT is fed by an amplified monitor send, ensure that the monitor send is Pre-EQ. This allows you to add EQ to the main PA sound on your channel but to send a flat (no EQ) signal to VoiceSoloP XT. With a good mic and a strong singer, a flat monitor is likely to be louder than an EQ'd one.

Specifications

Connectors

Connectors : 2 paralleled Speakon® combo jacks that accept Speakon or 1/4" connectors

Speaker

Speaker : 6.5 inch ICT custom-designed point source driver including inductively coupled tweeter
Nominal impedance : 8 ohms
Power : 120 Watt Program / 240 Watt Peak power handling
Sensitivity (1 Watt @ 1 meter) : 90 dB (1 kHz octave band)
Conical dispersion : 90 degrees
Frequency response : 120 Hz– 2 kHz
Peak SPL : 116 dB @ .5 meter

Case

Case : Enclosure of molded aluminum with integral bass port
Color : Black
Dimensions (H x W x D) : 9" x 7" x 9.75"
(23 cm x 18 cm x 25 cm)
Shipping weight : 11 lbs. (5 kg)
Net weight : 9.2 lbs. (4.2 kg)